

H1 IMPRINT MODE

Available imprint modes of the H1



Type 1
Prints all available exposure info.



Type 2
Prints basic exposure info only.



Type 3
Prints date and time info only.



Type 4
Prints the text you entered together with date and time



Type 5
Prints the text you entered together with basic exposure information



Type 6
Prints the text you entered

Type 1, Enhanced exposure information:



 
Aperture
Shutter speed
Light metering mode
Exposure mode
Auto focus mode
Frame number
Lens focal length incl. converter

Notes:

- 1 If an exposure adjustment is set on the camera, a value will appear after the exposure mode symbol
- 2 If a TTL flash is used, a flash icon appears after the exposure mode symbol
- 3 If a flash exposure adjustment is set, a value will appear after the flash icon
- 4 If all options are active, no focal length will be shown
- 5 Light metering mode is shown only when a viewfinder is attached
- 6 Autofocus mode does not appear if set to Manual focus and focus assist is set to "Off"

H1 IMPRINT MODE

Type 2, Basic exposure information:



Aperture

 
Shutter speed

Lens focal length
incl. converter

Notes:

- 1 If an exposure adjustment is set on the camera, a value will appear between shutter speed and focal length

Type 3, Date & Time:




Date (YY MM DD)

Time (HH:MM:SS)

Notes:

- 1 Seconds are only shown in 24 hour time format

 Type 4, Text & Date:



Custom text

Date (YY MM DD)

Notes:

- 1 If the text is longer than 33 characters, the date will be excluded

Type 5, Text & Info:



Custom text

Aperture

 
Shutter speed

Lens focal length
incl. converter

Notes:

- 1 If an exposure adjustment is set on the camera a value will appear between shutter speed and focal length
- 2 If the text is longer than 25 (19 with exposure adjustment) characters, part of the exposure info will be excluded

Type 6, Text:



Custom text. Max 37 characters

H1 IMPRINT MODE

Imprint mode setting


To make a selection of type of data for imprinting, proceed as follows:

①




From the normal screen press the "MENU" button.

②

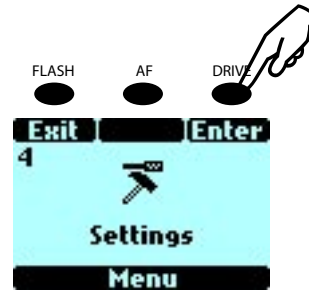


Scroll to the menu item "Settings" with the front wheel and press "Enter"

③

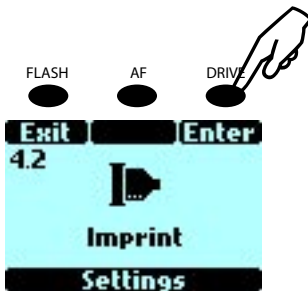


Scroll to the menu item "Imprint" with the front wheel and press "Enter"

④

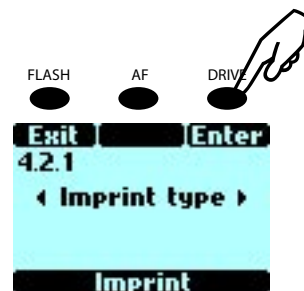


Scroll to the menu item "Imprint type" with the front wheel and press "Enter"

⑤

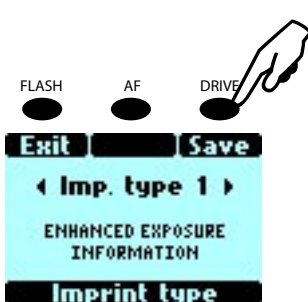

Select one of the six options you want (see all options on page 1) with the front wheel and press "Save"

⑥

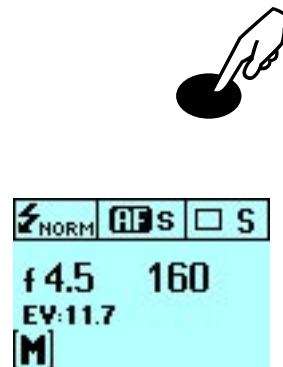

Finally, press the shutter release halfway to save the settings and return to normal screen.

Imprint text mode setting

To enter custom text for imprinting, proceed as follows:



① From the normal screen press the "MENU" button.




② Use the front wheel to select the menu "Settings", then press the "Drive" button. (marked with "Enter" on the LCD)



③ Use the front wheel to select the menu "Imprint", then press the "Drive" (Enter) button.



④ Use the front wheel to select the menu item "Text", then press the "Drive" (Enter) button.

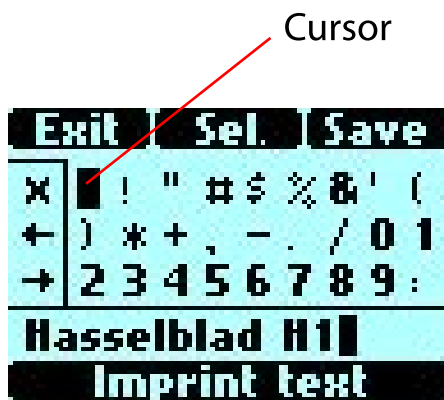


The main text screen will now appear which, by moving the control wheel, will display all the available characters. The two control wheels and the three buttons over the LCD are used to enter the text.

How this setting is made is explained in detail on the following pages.


Imprint text setting




Use the front wheel to move the cursor to the left until it is over the "X" character. This will activate the "delete-key"

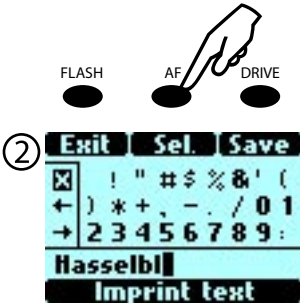


Press the button over the "Sel." caption (AF button) to erase the character to the left of the cursor in the lower row. Keep pressing the "Sel." button until the whole text is erased.

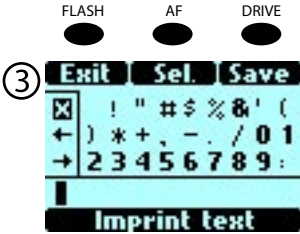


The text string is erased.

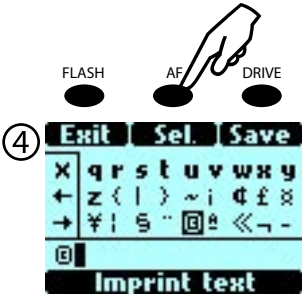


Use the front and rear wheel to find the Copyright sign. This is located low down on the list, so you will have to scroll down a few screens to find it. (11 times down with the rear wheel and 5 times to the right with the front wheel). Now press "Sel" button to select the © character.

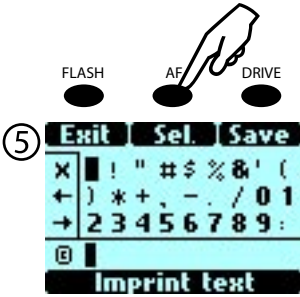


Find the space character left to the exclamation mark on the first row. Press "Sel.".

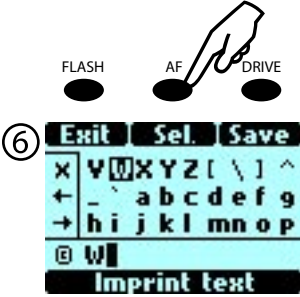

Find the W character and press "Sel.".

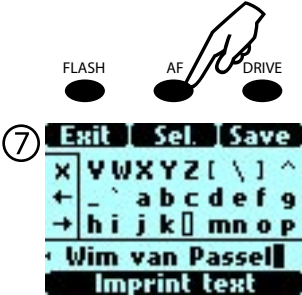

Continue in the same way with the other characters until the complete string is ready. Maximum are 37 characters.

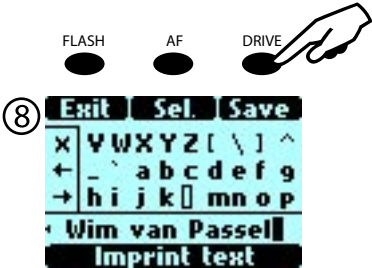

Press the "Save" button to store the text in the camera




The display after pressing "Save". Remember to make the correct setting on the magazine to record the text on film. See the following section.


Magazine settings




The last setting is to check that the magazine is programmed to imprint data. This is the default setting of the magazine. Check that the caption “DATA” is shown on the magazine LCD. If this is not the case, slide the lock switch (4) on the right side of the magazine forward to unlock the magazine buttons. Press the mode button (1) repeatedly until the caption “DATA” is shown together with “**OFF**”. Use either of the change buttons (2, 3) to change the indication to “**on**”. Press the rear button again. Slide the lock switch backwards to lock the buttons again.





- 1 Mode button
- 2 Change down button
- 3 Change up button
- 4 Lock switch

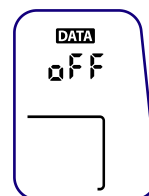
Press the  button until the display shows



Press either of the   buttons to change to “on” and press the  again to store the change.

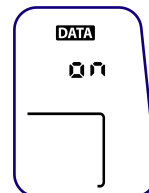

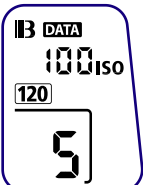 Magazine is correctly programmed for data imprint as indicated by the **DATA** icon at the top of the LCD

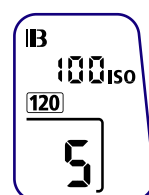

Magazine is programmed not to imprint data